

F100-2IOL



Preliminary

Content

Safety instructions	5
Tecnical data	6
Description of function	8
Installation	10
Typeplate	13
Warranty	14



INSTRUCTION MANUAL

Inductive coupler system

F100-2IOL

Validity:

OE012330 OE012332/4	Inductive coupler F100-2IOL Base	28.07.2023	V1	EN
OE012331 OE012333/5	Inductive coupler F100-2IOL Remote	28.07.2023	V1	EN

Thank you for purchasing your F100-2IOL inductive coupler system..

This **instruction manual** contains the installation, the functional description and the operation of the „F100-2IOL“.

SMW-AUTOBLOK reserves the right to make **changes without notice**.

This **instruction manual** is a **part of the „F100-2IOL “** and must be passed to the new owner in case of sale.

This **instruction manual** **may not be** -in whole or in part- **copied** without our written agreement.



Please read the instruction manual carefully before installation and use and always follow the regulations.

Please note especially the sections which are marked with the following signs:



- Danger of injury or danger to life if instructions are not followed.
- Danger of damage to the sensor, the machine or the components.



Danger!



General precept sign!



General warning sign!



No access for persons with pacemakers



Danger to the environment!



Follow the instructions!



Caution: Hot surface!



1. Intended use

The device is designed to transmit energy and signals without contact. The system must not be used in applications where the safety of persons depends on the device function.

Liability claims against the manufacturer expire in the event of damage caused by:

- unauthorized tampering
- use not in accordance with the intended purpose
- use, installation, handling contrary to the regulations of these operating instructions.



2. Authorized personnel

Installation and commissioning are only permitted by trained specialist operators.



3. Visual inspection

Please check the product for visible damage prior to use!



4. Duties of the operator

The operator must ensure that the locally applicable national and international safety regulations are observed. The unit may only be operated with an approved power supply.



5. Operating faults

In case of defective and unrecoverable device malfunctions, put the device out of operation and secure it against unauthorized use.



6. Caution: Hot surface!

Danger of burns from hot surfaces!

The active surface heats up even under normal operating conditions.

Keep hands and objects away from the active surface.

Avoid contact of metallic objects on the active surface.

Fire hazard!



7. Protection against electromagnetic fields during operation and assembly

The permissible values according to VDE 0848 Part 3-1 are observed from a distance of > 3 mm. Persons with physical aids (e.g. pacemakers) may be exposed to health hazards due to the magnetic fields emitted by the coupler system. The minimum distance for this group of persons is > 5 mm. The operator must ensure that this minimum distance is also maintained during operation by taking suitable measures.



8. Certification

With the CE mark we confirm that our products comply with the requirements of the EC Directives 2004/108/EC (EMC) and the EMC Act.

In an accredited EMC laboratory, proof was provided that the products meet the EMC requirements of the basic technical standards:

- EN 61000-6-4 (emitted interference) and
- EN 61000-6-2 (immunity to interference)



In case of doubts or questions please ask SMW-AUTOBLOK or one of our authorized offices.



Before the start up, the operating instructions must be read carefully.

F100-2IOL

Inductive Coupling System

Axial coupler

■ Contact free transmission of energy and signals




Application/customer benefits

- Contact free, safe transmission of energy and signals between moving / rotating and stationary components
- Application examples: Robotic (End of Arm Tooling), Automation, Mechanical engineering
- Substitution of slip ring / connector
- Dynamic Pairing
- Wear and maintenance free
- Protective functions: temperature monitoring, foreign object detection, reverse polarity protection
- Multi-level LED with good visibility

Technical features

- Diameter 100 mm / Through hole 50 mm
- Operating voltage 24 V / max. 6 A
- Transmission distance 0 - 4 mm
- Transmission of energy 24 V / 75 W
- Transmission of signals: 2 x IO-Link (COM 1, COM 2, COM 3)
- Connections: Base: 2x M12 x 1 male 5-pin
Remote: 2x M12 x 1 female 5-pin
- Protection class: IP 67

Block diagram:

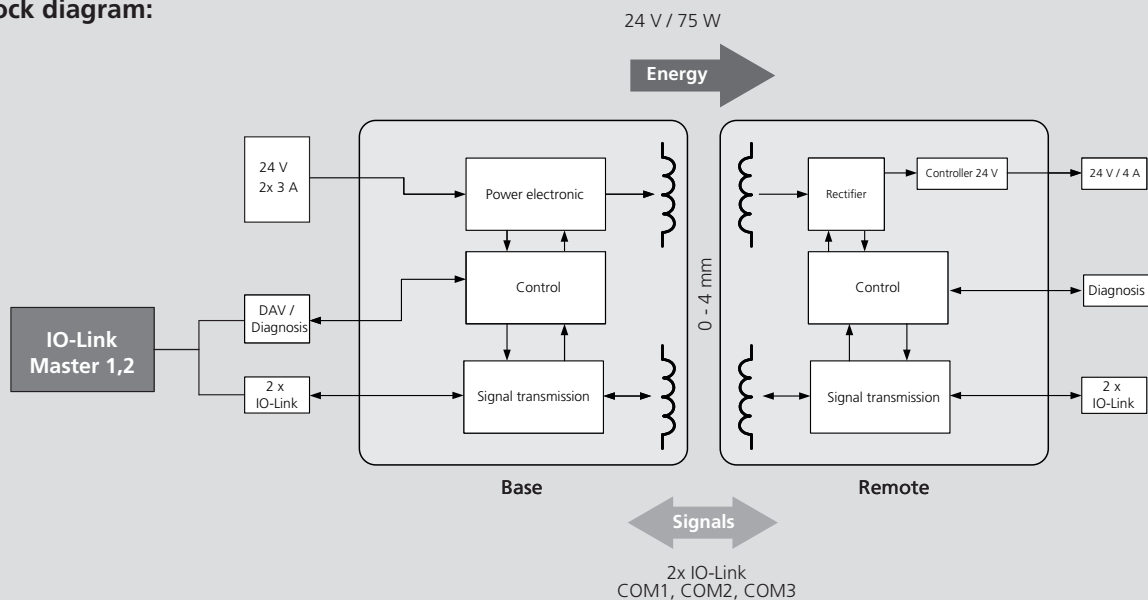

Subject to technical changes.
For more detailed information please ask our customer service.







Inductive coupling system F100-2IOL

SMW-electronics Type	Base	Remote
Id. No.	0E012330	0E012331
Operating temperature (housing surface)	-20 °C ... +60 °C	
Storage temperature	-20 °C ... +60 °C	
Transmission distance	0 mm ... 4 mm	
Operating voltage	24 V	-
Output voltage	-	24 V (75 W)
Signal transmission	2x IO-Link (COM2, COM 2, COM 3)	
LED	2 LEDs 2-color	
Current consumption (Base)	6 A (24 V)	-
Overload protection / short circuit protection	✓	✓
Residual ripple	-	< 50 mV
Reverse polarity protection	✓	-
Data-Valid output	max. 100 mA	
Ready delay	< 1s	

F100-2IOL

- Stationary unit - Base
- Mobile unit - Remote

Axial coupler

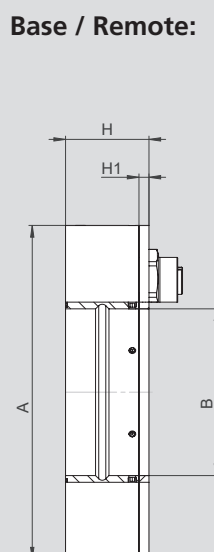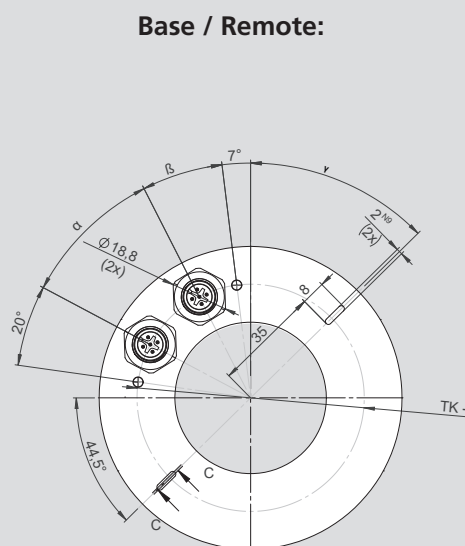

2x Male connector 5-pin
M 12 x 1

2x Female connector 5-pin
M 12 x 1

Subject to technical changes.
For more detailed information please ask our customer service.


Inductive coupling system F100-2IOL			
SMW-electronics Type		Base	Remote
Id. No.		0E012330	0E012331
A	mm	100	
B	mm	50	
C	mm	1	
H	mm	25	
H1	mm	3	
α	degree	35	
β	degree	20	
γ	degree	45,5	
Housing material		Al, GFK	
Protection class		IP 67	

Function LED IO-Link Base (X1, X2)	
LED Power	
Color	
	Yellow / red
	Yellow » SIO mode active and SIO signal is high
	Flash yellow (1000ms on, 100ms off),» IO-Link communication active, power is on, Remote was detected
	Flashing 2 Hz yellow » no IO-Link device detected, power on, no Remote detected
	Flashing 2 Hz red » Short circuit on IO-Link PIN
	Flashing 5 Hz red » Overload voltage output Remote


Function LED IO-Link Remote (X1, X2)	
LED Power	
Color	Yellow / red
Function	Yellow » SIO mode active and SIO signal is high
	Flash yellow (1000ms on, 100ms off),» IO-Link communication active, power is on, Base has been detected
	Flashing 2 Hz yellow » No IO-Link communication, power on, no Base detected
	Flashing 2 Hz red » Short circuit on IO-Link PIN
	Flashing 5 Hz red » Overload voltage output Base

PIN assignment	PIN	X1 Base	X2 Base	X1 Remote	X2 Remote
Supply voltage	1	24 V IN	24 V IN	24 V OUT	24 V OUT
Data-Valid	2	DAV 24 V	-	-	-
Ground	3	GND	GND	GND	GND
IO-Link Signal	4	IO-Link CQ	IO-Link CQ	IO-Link CQ	IO-Link CQ
-	5	-	-	-	-

View Base

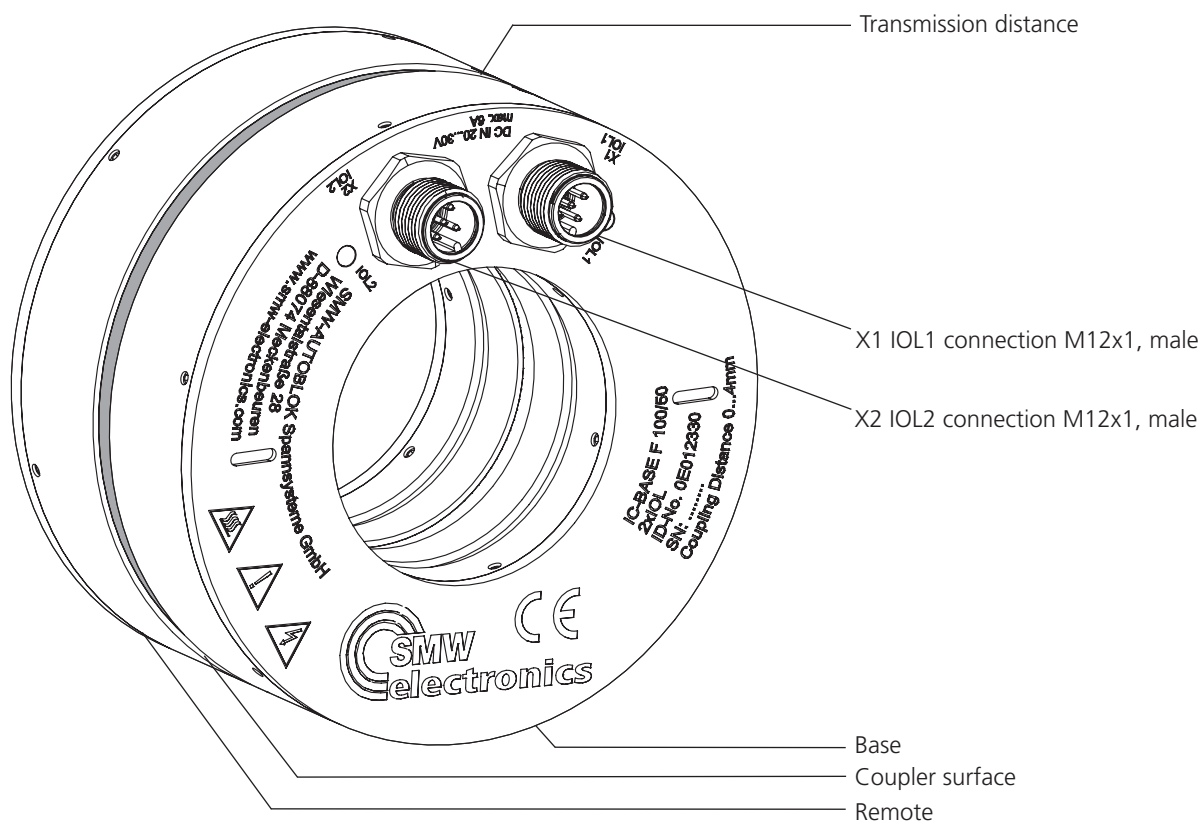

View Remote

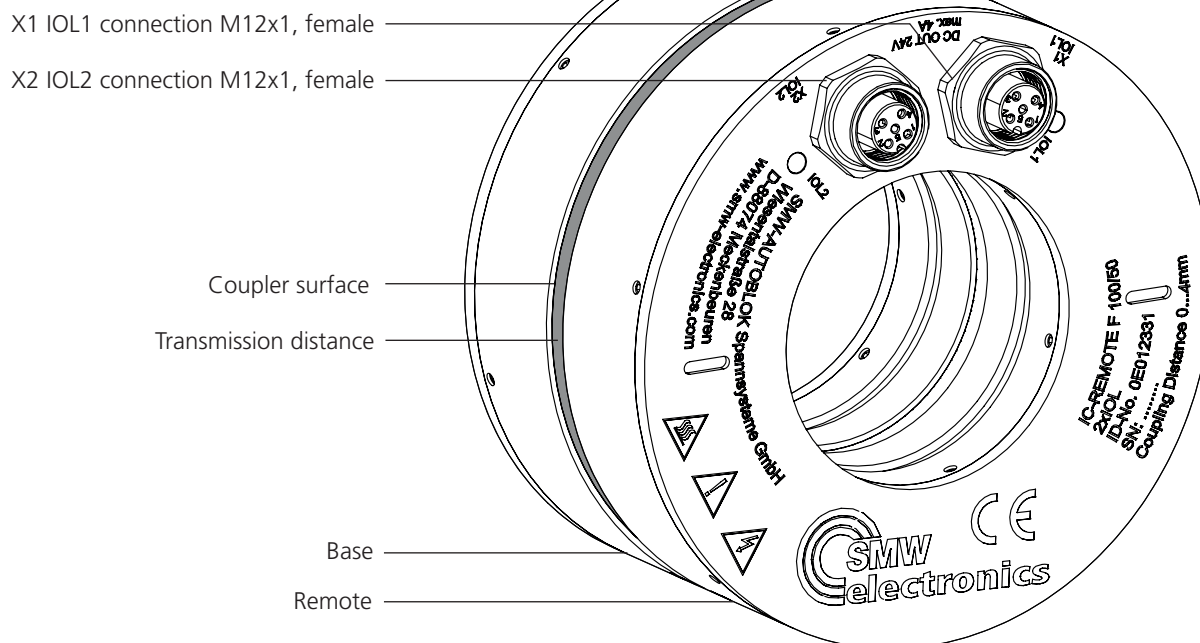

Description

The inductive coupling system F100-2IOL is used to operate electronic components of automation technology such as IO-Link hubs, sensors or actuators on mobile, dynamically variable or rotating units in machine and device parts.

A contactless bilateral fully transparent 2 IO-Link signal transmission takes place between a stationary unit (base) and a mobile unit (remote). The IO-Link protocol is transmitted without restrictions (COM1, COM2, COM3), so that no parameter settings are required for the inductive coupling system. This means that no device-specific IODD is required.

In addition to signal transmission, electrical energy is also transmitted without contact to the mobile unit (remote) for the power supply of sensors or actuators.

The F100-2IOL inductive coupling system consists of a stationary unit (base) and a mobile unit (remote), each of these units are equipped with different mounting possibilities. Both units are mounted axially facing each other on a distance of 0 to 4 mm from the coupling surface. The manufacturer recommends the mounting in a metallic environment.

An integrated coil system ensures the transmission of the energy and the signals on a contactless inductive principle. The transmission is independent of whether there is a rotating movement or not. The transmitted 2 IO-Link signals are usually passed on from the stationary unit (base) to the control component.

In addition, the system has all the usual protective functions (temperature protection, reverse polarity protection) and it is protected according to IP 67.

The system is designed as a plug and play solution, so that integration into the customer's system is possible with minimal effort. All important interfaces are designed to be detachable, so that replacement during maintenance and service is possible without delay. The stationary and mobile units are compatible and interchangeable (dynamic pairing).

The electrical and mechanical interfaces for the individual function units are described in the following chapters.

Start-up

Notice

Use base coupler 0E012330 only with remote coupler 0E012331.

The start-up can only occur after the entire transmission chain of base and remote has been completely set up. The installation of the components must always be performed in a (electrical) power-free state.


A correct coupling between Base and Remote is indicated by the Data Valid signal.

Integration

The base and remote units of the contactless transmission are integrated by mounting them in axial alignment in compliance with the installation specifications. The assembly must be performed in a (electrical) power-free state. The following sections describe valid installation instructions that must be strictly followed for correct operation.

We recommend to use the coupler with a coupling distance of 2 mm.

Distance to each other


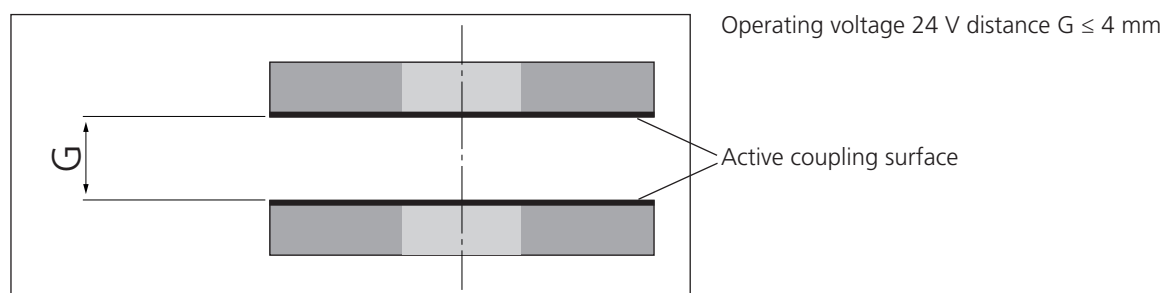


Installation in metall




Attention!

Metal objects in the area near the active coupling surfaces can heat up strongly due to the magnetic field generated by the coupler. Therefore, the specified minimum distances must be strictly followed when installing in metal.

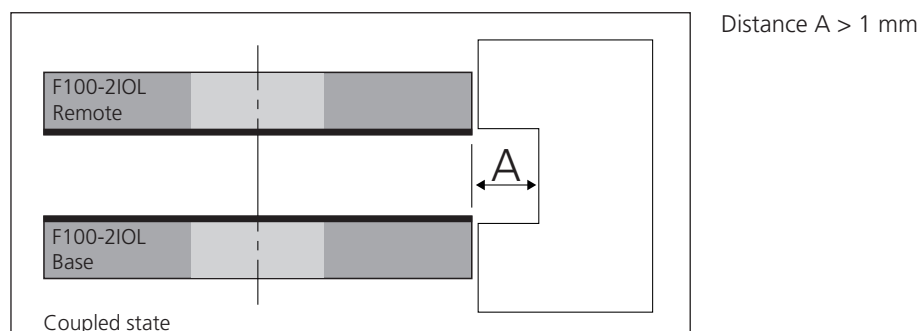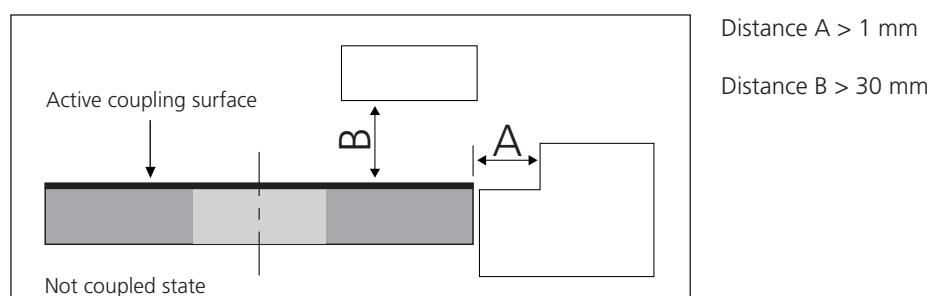

Permissible angle offset


The permissible angle offset allows function in special mounting positions.

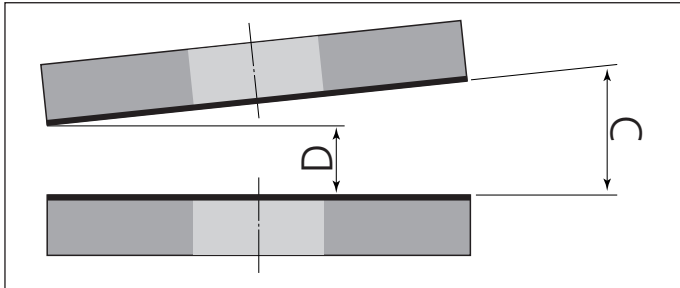

Distance D	Angle °
0 mm	< 3°
2 mm	< 2°

Permissible side offset

The maximum side offset between base and remote unit is ± 1 mm.

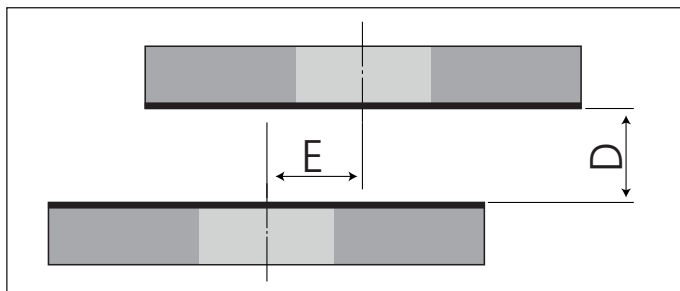

Side offset $E < 1$ mm

Attention!

The factors like environment temperature, distance, angle offset and side offset can affect the amount of energy transfer. The coupler works optimal centric at $D = 1$ to 2 mm.

Attention!

No liability in case of damage to the coupling surfaces caused by the use of the product, for example as a result of insufficient cleanliness. If the coupling surfaces are subject to contamination during operation, suitable action (blowing air and / or flushing) must be performed.


Attention!

To ensure that the specified values are permanently reached, the housing of the coupling system must be mounted in a metallic environment so that the heat can be conducted away. The maximum housing temperature is $T=60^{\circ}\text{C}$.

12 SMW-AUTOBLOK

Typeplate and contact

If you have any questions about the product or if you wish to place order, please specify the type and item number on the typeplate of the inductive coupling system.

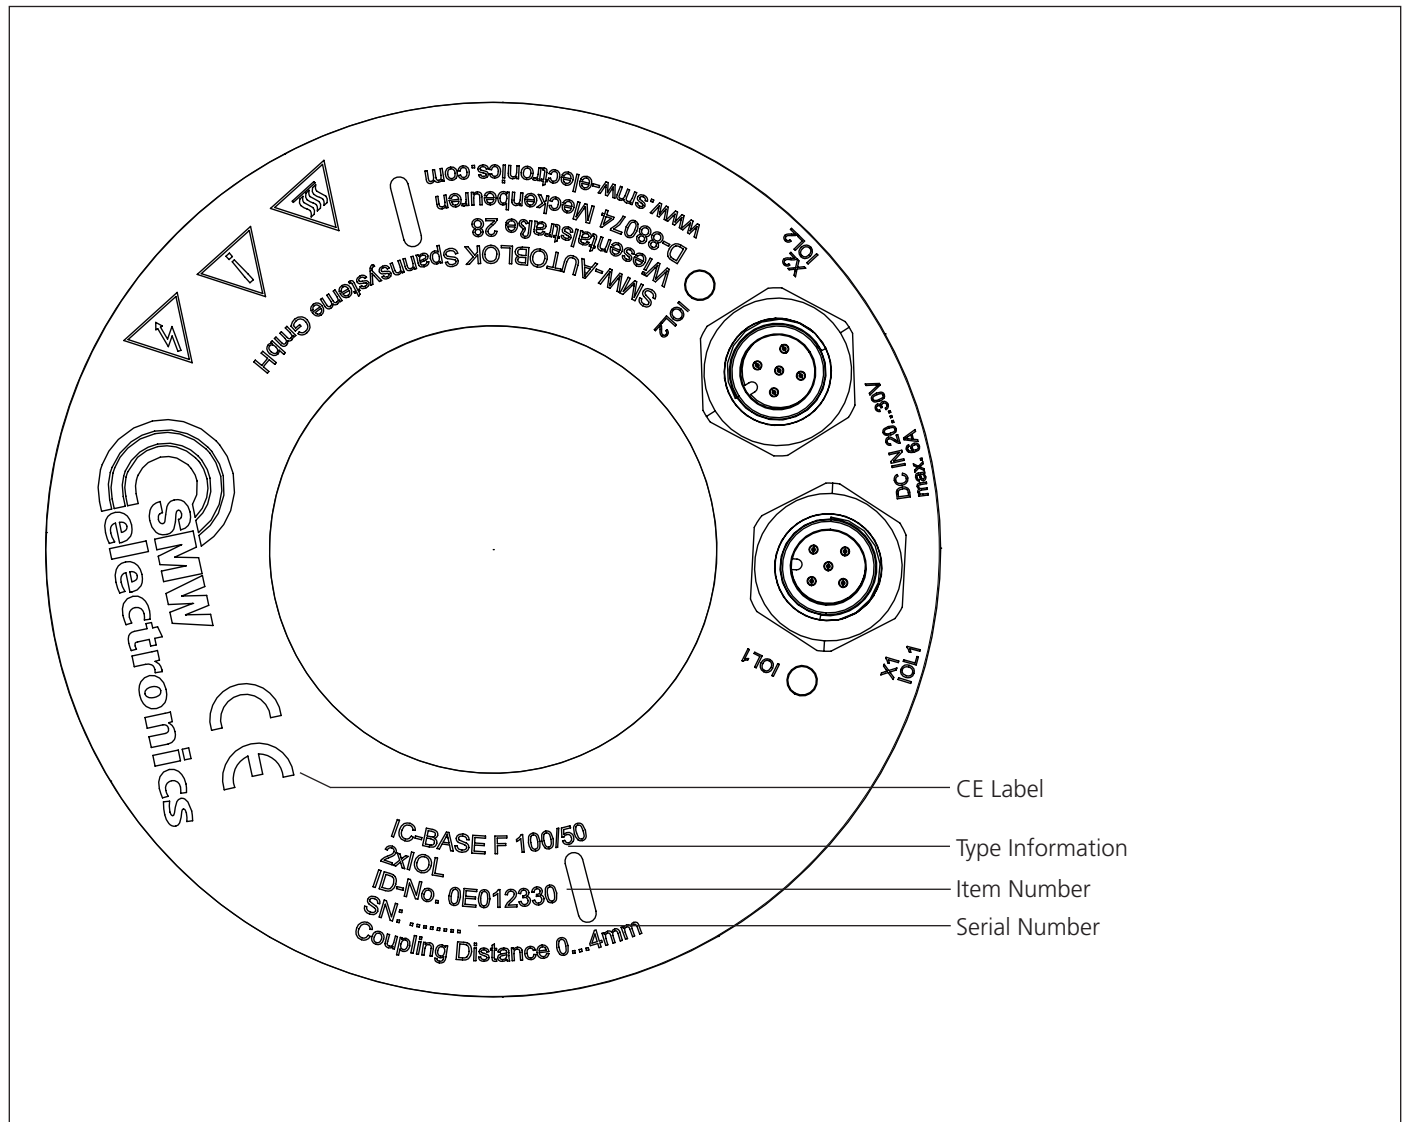

Contact:

SMW-AUTOBLOK Spannsysteme GmbH

Postfach 1151 • D-88070 Meckenbeuren
 Wiesentalstraße 28 • D - 88074 Meckenbeuren
 Tel.: +49 (0) 7542 - 405 - 0

Vertrieb Inland:

Fax: +49 (0) 7542 - 3886
 E-Mail ► vertrieb@smw-autoblok.de

Sales International:

Fax: +49 (0) 7542 - 405 - 181
 E-Mail ► sales@smw-autoblok.de

12 months warranty

Product: Inductive coupler system F100-2IOL

SMW-AUTOBLOK guarantees the proper function of the inductive coupling system, if the operation and storage are in accordance with the technical specifications of this operating manual.

In the case that the inductive coupling system does not meet the specified requirements and values, after checking the facts, repair or replacement will be carried out.

In case of production defects, the inductive coupling system will be repaired free of charge within the warranty period.

The warranty period will be 12 months starting from the date of purchase.

In order to maintain the warranty, the return must be carried out in the original packaging.

In addition, a description of the malfunction must be included.

The manufacturer otherwise retains the right not to admit warranty claims.

**Germany**

SMW-AUTOBLOK Spannsysteme GmbH
Postfach 1151 • D-88070 Meckenbeuren
Wiesentalstraße 28 • D-88074 Meckenbeuren
Tel.: +49 (0) 7542 - 405 - 0
Vertrieb Inland ► vertrieb@smw-autoblok.de
Fax: +49 (0) 7542 - 3886
Sales International ► sales@smw-autoblok.de
Fax: +49 (0) 7542 - 405 - 181

**Italy**

AUTOBLOK s.p.a.
Via Duca D'Aosta n.24
Fraz. Novaretto
I-10040 Caprie - Torino
Tel. +39 011 - 9638411
Tel. +39 011 - 9632020
Fax +39 011 - 9632288
E-mail ► info@smwautoblok.it

**U.S.A.**

SMW-AUTOBLOK Corporation
285 Egidi Drive - Wheeling, IL 60090
Tel. +1 847 - 215 - 0591
Fax +1 847 - 215 - 0594
E-mail ► autoblok@smwautoblok.com

**France**

SMW-AUTOBLOK
17, Avenue des Frères Montgolfier - Z.I. Mi-Plaine
F-69680 Chassieu
Tel. +33 (0) 4.72.79.18.18
Fax +33 (0) 4.72.79.18.19
E-mail ► autoblok@smwautoblok.fr

**Japan**

SMW-AUTOBLOK Japan Inc.
1-56 Hira, Nishi-Ku
Nagoya
Tel. +81 (0) 52 - 504 - 0203
Fax +81 (0) 52 - 504 - 0205
E-mail ► infosaj@smwautoblok.co.jp

**Great Britain**

SMW-AUTOBLOK Telbrook Ltd.
7 Wilford Industrial Estate
Ruddington Lane, Wilford
GB-Nottingham, NG11 7EP
Tel. +44 (0) 115 - 982 1133
E-mail ► info@smw-autoblok-telbrook.co.uk

**China**

SMW-AUTOBLOK (Shanghai) Work Holding Co., Ltd.
Building 6, No.72, JinWen Road, KongGang
Industrial Zone, ZhuQiao Town, Pudong District
201323, Shanghai P.R. China
Tel. +86 21 - 5810 - 6396
Fax +86 21 - 5810 - 6395
E-mail ► china@smwautoblok.cn

**Spain**

SMW-AUTOBLOK IBERICA, S.L.
Ursalto 4 – Pab. 9-10 Pol. 27
20014 Donostia - San Sebastián (Gipuzkoa)
Tel.: +34 943 - 225 079
Fax: +34 943 - 225 074
E-mail ► info@smwautoblok.es

**Mexico**

SMW-AUTOBLOK Mexico, S.A. de C.V.
Acceso III No. 16 Int. 9
Condominio Quadrum
Industrial Benito Juarez
Queretaro, Qro. C.P. 76120
Tel. +52 (442) 209 - 5118
Fax +52 (442) 209 - 5121
E-mail ► smwmex@smwautoblok.mx

**Canada**

SMW AUTOBLOK CANADA CORP
1460 The Queensway - Suite 219
Etobicoke, ON M8Z 1S7
Tel. +1 416 - 316 - 3839
E-mail ► info@smwautoblok.ca

**India**

SMW-AUTOBLOK Workholding Pvt. Ltd.,
Plot No. 4, Weikfield Industrial Estate,
Gat No. 1251, Sanaswadi, Tal - Shirur,
Dist - Pune. 412 208
Tel. +91 2137 - 616 974
E-mail ► info@smwautoblok.in

**Taiwan**

AUTOBLOK Company Ltd.
No.6, Shuyi Rd., South Dist.,
Taichung, Taiwan
Tel. +886 4-226 10826
Fax +886 4-226 12109
E-mail ► taiwan@smwautoblok.tw

**Turkey**

SMW AUTOBLOK Makina San, Ve Tic. Ltd. ti.
Yeni ehir Mah, Osmanli Blv, Volume Kurtkoy Ofis
No:9, Kat:1, D:4, 32912, Pendik Istanbul
Tel. +90 216 629 - 2019
E-mail ► info@smwautoblok.com.tr

**Czech Republic / Slovakia**

SMW-AUTOBLOK s.r.o.
Merhautova 20
CZ - 613 00 Brno
Tel. +420 513 034 157
E-mail ► info@smw-autoblok.cz

**Sweden / Norway**

SMW-AUTOBLOK Scandinavia AB
Kasernvägen 2
SE - 281 35 Hässleholm
Tel. +46 (0) 761 420 111
E-mail ► info@smw-autoblok.se

**Poland**

SMW-AUTOBLOK Poland Sp. z o.o
Stalowa 17
41-506 Chorzów
Tel. +48 736 059 699
E-mail ► info@smwautoblok.pl

**Korea**

SMW-AUTOBLOK KOREA CO., LTD.
1502-ho, Charyong-ro 48beon-gil,
Uichang-gu, Changwon-si
Gyeongsangnam-do, 51391, Republic of Korea
Tel. +82 55 264 9505
E-mail ► info-korea@smw-autoblok.net